 
Captive Hexagon Head Bolts

d.



Screw The Captive Screw Through The Screw Hole In The Cover When The Screw Has Been Removed From The Frame/Panel



The Screw Will Not Fall From The Cover Due To The Thread Catching Against The Screw Hole In The Cover.

Often Used With A Captive Washer

Captive Hexagon Head Bolts							
Diameter-d1	M3	M4	M5	M6	M8	M10	M12
d2 - (+/- 0.12)	2	2.8	3.7	4.2	6	7.5	8
L2 - (+/- 0.25)	4.5	*	*	7.5	10	12.5	15
h Max	2.5	2.9	3.6	4.1	5.3	6.4	7.5
A/F	5.5	7	8	10	13	17	19
	Lengths - L1 (+/- 1.5mm)						
	10	12	12	12	16	20	25
	То	То	То	То	То	То	То
	40	60	60	80	80	80	80

* L2 On M4 x 12 To 20 = 6mm AND L2 On M4 x 30 To 60 = 8mm *L2 On M5 x 12 To 20 = 7.5mm AND On M5 x 30 To 60 - 10mm

Material: A2 Stainless Steel

INFORMATION AND DRAWINGS PROVIDED ARE FOR REFERENCE ONLY