
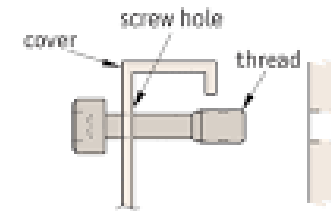


Captive Panel Screws

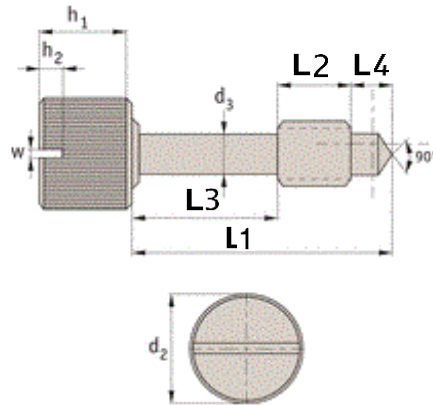

Screw The Captive Screw Through The Screw Hole In The Cover.
 When The Screw Has Been Removed From The Frame/Panel, The Screw Will Not Fall Out Due To The Thread Catching Against The Screw Hole In The cover.
 Often Used With A Captive Washer

Captive Panel Screws									
Diameter	d2	L1	L2	d3	L3	L4	h1	h2	w
M3	6.5	10 To 26	3.2	2	4.3 To 20.3	2	6.5	2	1.2
M3	8	10 To 24	3.2	2	4.3 To 18.8	2	8	2	1.2
M4	8	10 To 32	5.5	3	3 To 24	2.5	8	2	1.2
M5	10	14 To 40	6.5	3.5	2.5 To 27.5	4	10	2.5	1.5
M6	12	16 To 50	8	4.5	3 To 33	5	15	2.5	2

Material: A2 Stainless Steel

INFORMATION AND DRAWINGS PROVIDED ARE FOR REFERENCE ONLY