
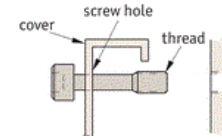


Captive Phillips Pan Head Screws

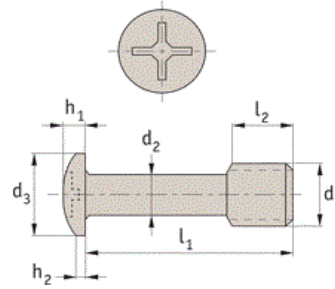

Screw The Captive Screw Through The Screw Hole In The Cover. When The Screw Is Been Removed From The Frame/Panel, The Screw Will Not Fall From The Cover Due To The Thread Catching Against The Screw Hole In The Cover. Often Used With A Captive Washer

Captive Phillips Pan Head Screws					
Diameter-d1	M2.5	M3	M4	M5	M6
d2 (+/-0.12)	1.7	2	2.8	3.7	4.2
L2 (+/- 0.25)	3.7	4.5	6.0	7.5	7.5
d3 Max	5.0	5.6	8.0	9.5	12
h Max	2..1	2.4	3.1	3.7	4.7
h2	0.7	0.74	0.93	1.0	1.14
Drive-Phillps	PH1	PH2	PH2	PH2	PH3
	Length - L1 (+/- 1.5mm)				
	8	10	12	12	12
	To	To	To	To	To
	20	40	60	60	80

Material: A2 Stainless Steel

INFORMATION AND DRAWINGS PROVIDED ARE FOR REFERENCE ONLY