



Captive Socket Head Capscrews

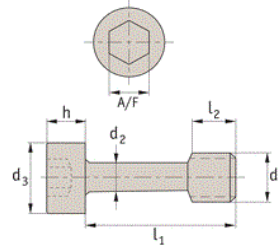

Screw The Captive Screw Through
The Screw Hole In The Cover
When The Screw Has Been
Removed From The Frame/Panel

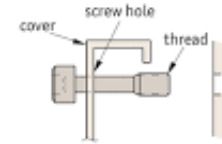

The Screw Will Not Fall From The
Cover Due To The Thread Catching
Against The Screw Hole In The
Cover.
Often Used With A Captive Washer

Captive Socket Head Capscrews								
Diameter-d1	M2.5	M3	M4	M5	M6	M8	M10	M12
d2 - (+/- 0.12)	1.8	2	2.8	3.7	4.2	6	7.5	8
L2 - (+/- 0.25)	3	4.5	6	7.5	7.5	10	12.5	15
d3 Max	4.5	5.5	7	8.5	10	13	16	18
h-Max	2.5	3	4	5	6	8	10	12
A/F	2	2.5	3	4.0	5	6	8	10
	Lengths - L1 (+/- 1.5mm)							
	5	8	12	12	12	16	20	25
	To	To	To	To	To	To	To	To
	12	30	50	50	80	80	80	80

Material: A2 Stainless Steel

INFORMATION AND DRAWINGS PROVIDED ARE FOR REFERENCE ONLY