



Captive Torx Caphead Screws

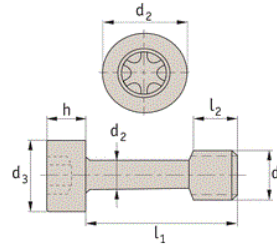

Screw The Captive Screw Through
The Screw Hole In The Cover
When The Screw Has Been
Removed From The Frame/Panel

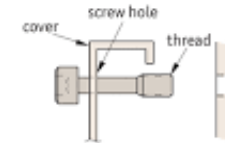

The Screw Will Not Fall From The
Cover Due To The Thread Catching
Against The Screw Hole In The
Cover.
Often Used With A Captive Washer

Captive Torx Caphead Screws								
Diameter-d1	M3	M4	M5	M6	M8	M10	M12	
d2 - (+/- 0.12)	2	2.8	3.7	4.2	6	7.5	8	
L2 - (+/- 0.25)	4.5	6	7.5	7.5	10	12.5	15	
d3 Max	5.5	7	8.5	10	13	16	18	
h Max	3	4	5	6	8	10	12	
Drive	TX10	TX20	TX25	TX30	TX40	TX50	TX55	
	Lengths - L1 (+/- 1.5mm)							
	10	12	12	12	16	20	25	
	To	To	To	To	To	To	To	
	30	50	50	80	80	80	80	

Material: A2 Stainless Steel

INFORMATION AND DRAWINGS PROVIDED ARE FOR REFERENCE ONLY