

Ankerbolt Socket Bolt


INSTALLATION INSTRUCTIONS

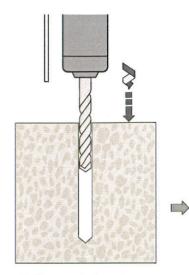


-Drill correct diameter hole to corresponding depth

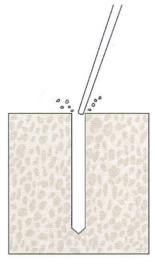

-Clean hole by blowing to remove drilling debris and dust

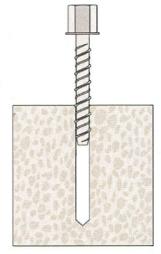


-Insert anchor into concrete using suitable impact wrench

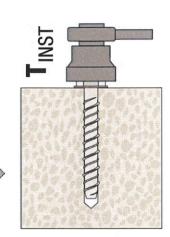

-Tighten with torque wrench to recommended torque

HOLLOW CONCRETE PLANKS INSTALLATION INSTRUCTIONS

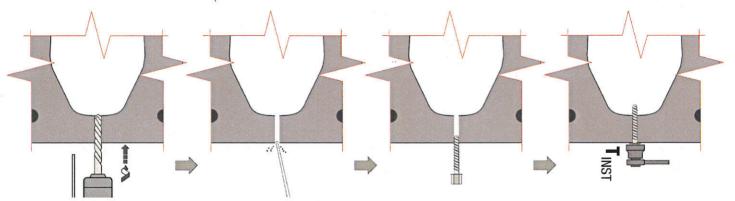

-Drill correct diameter hole into void

-Clean hole by blowing to remove drilling debris and dust

-Insert anchor into concrete using suitable impact wrench

-Tighten with torque wrench to recommended torque