


Nylon Frame Anchor



| Nylon Frame Anchor | | | | | | |
|--------------------|---------------------|--------------------|--------------------------|------------|--------------------|--|
| Part Ref. | Anchor Hole Size mm | Anchor Plug Length | Maximum Fixing Thickness | Pozi Drive | Minimum Hole Depth | |
| NF08060 | 8 | 60 | 20 | | 45 | |
| NF08080 | | 80 | 40 | | | |
| NF08100 | | 100 | 60 | | | |
| NF08120 | | 120 | 80 | | | |
| NF10080 | 10 | 80 | 35 | | 50 | |
| NF10100 | | 100 | 55 | | | |
| NF10120 | | 120 | 75 | | | |
| NF10140 | | 140 | 95 | | | |
| NF10160 | | 160 | 115 | | | |

Nylon PA6 Ribbed Plug Fitted With Pozi Drive Zinc And Yellow Plated Screw

Installation Instructions

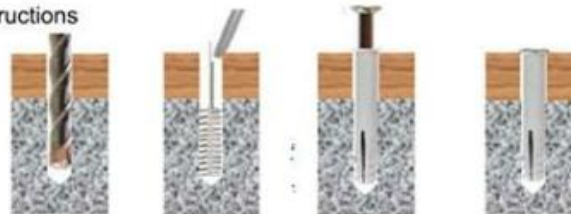

1. Drill correct diameter hole through fixture to correct depth in base material.
2. Clean hole by brushing and blowing
3. Insert Frame Fixing through fixture into base material and tighten screw.

DRAWINGS AND INFORMATION PROVIDED ARE FOR INFORMATION ONLY