

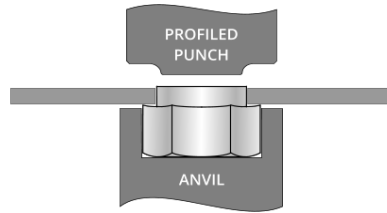


Rivet Bush Installation Guide

Punch or drill specified hole size.
Ensure that you are using the correct gauge fastener for the panel thickness used.
Place part in anvil and locate panel



Using a profiled punch, ensuring panel is held perpendicular to the punch and anvil face, apply a parallel squeezing force to form the correct spigot profile.

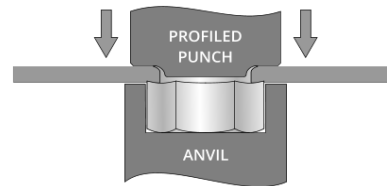

For optimum performance, installing with a profiled punch is highly recommended. A flat punch can also be used but will result in reduced push-out performance.