


Self Clinch Flush Nut Installation Guide


1



Punch Or Drill Specified Hole Diameter
In Sheet / Panel And
Seat Fastener Squarely In Sheet / Panel
(DO NOT Deburr The Hole)

2

Flat Punch

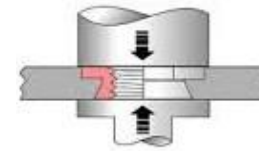

Flat Anvil

Press Fastener Into Sheet / Panel
Until Hexagon Head Portion Is No
Longer Visible