



# Self Clinch Nut Installation Guide

1

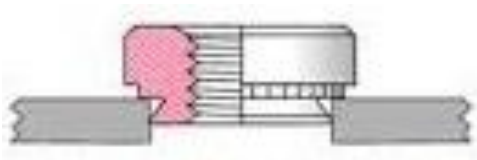

Punch Or Drill Specified Hole Diameter  
In Sheet / Panel And  
Seat Fastener Squarely In Sheet / Panel  
(DO NOT Deburr The Hole)

2

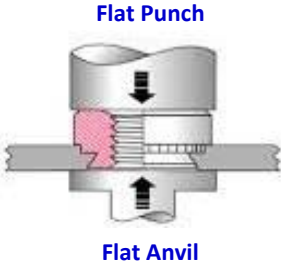

Press Fastener Into Sheet / Panel  
Until The Knurled Section Under The  
Head Is No Longer Visible