



Rod Hanger setting Tool Part number MF508RH


PURLIN AND BEAM INSTALLATION




Attach setting tool to socket




Drill through steel

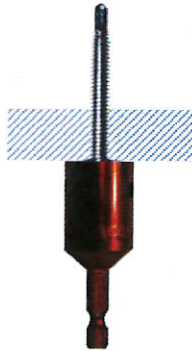

Continue to thread socket into steel

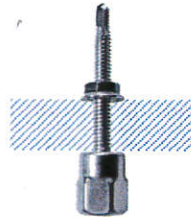

Attach back nut where required

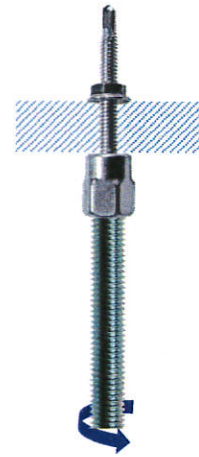

Screw in threaded rod.
Do not overtighten